
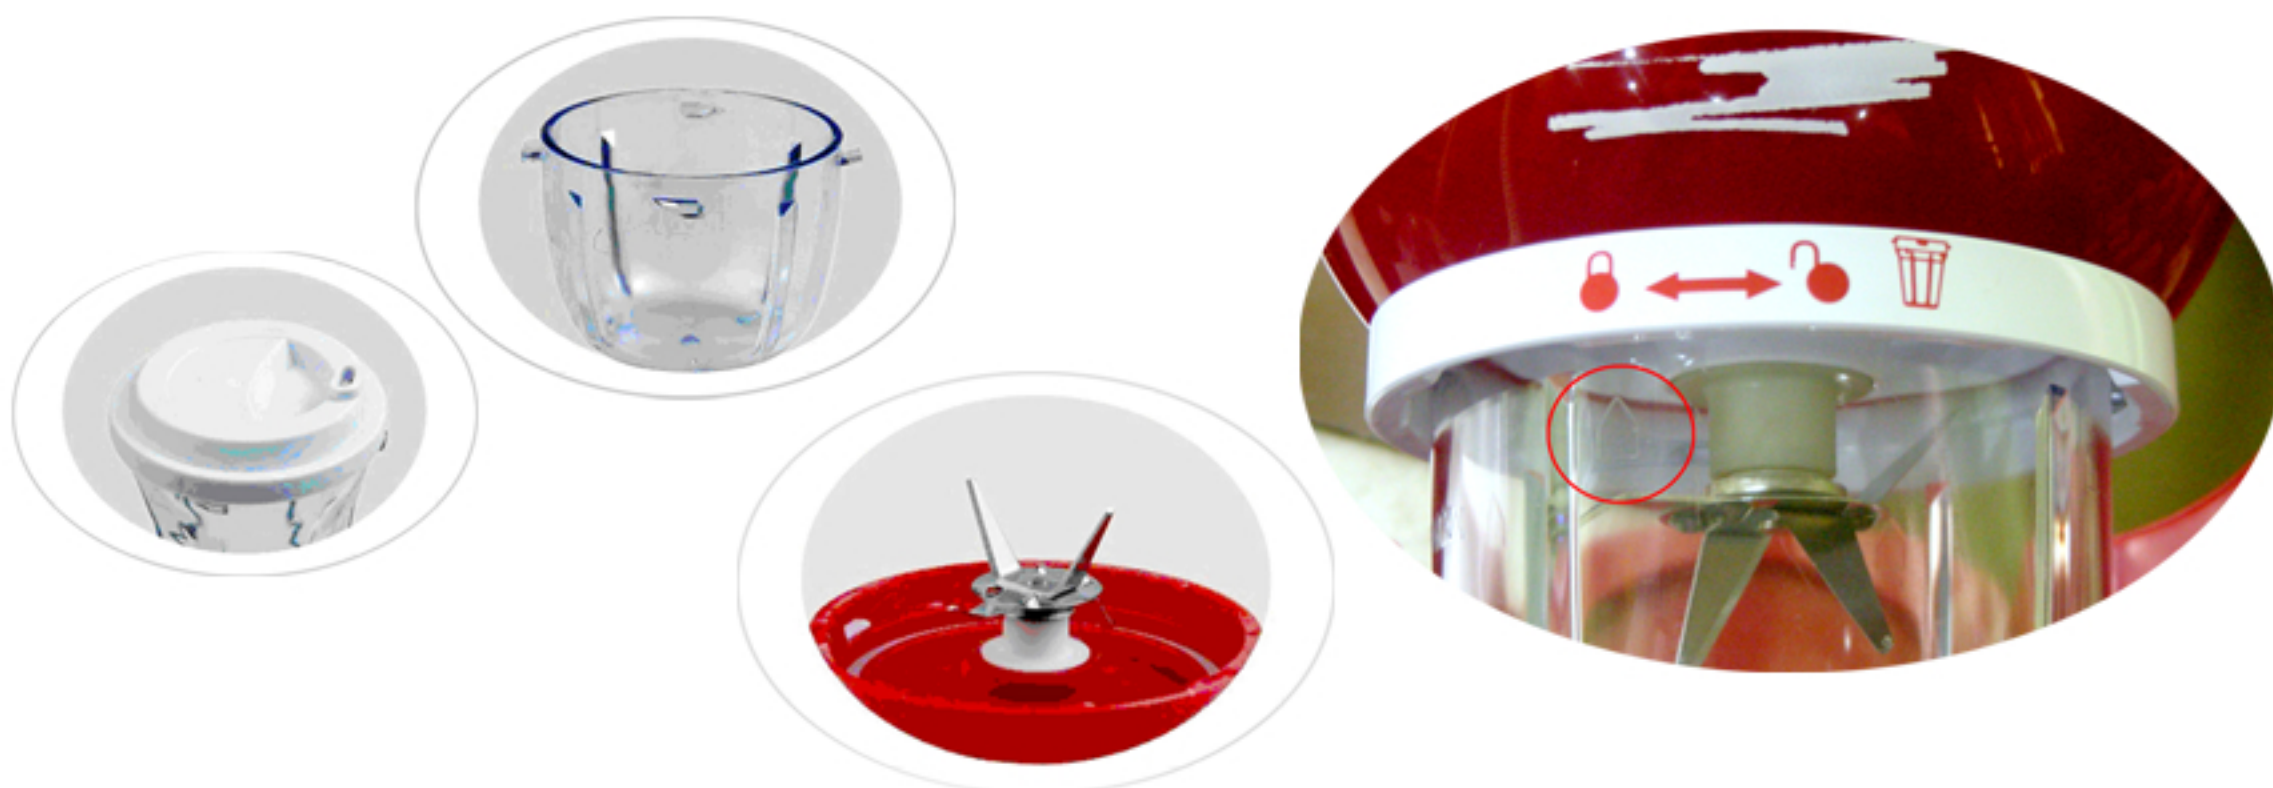



## HOW TO FIT THE JAR

The arrow marking on the jar has to point at the marking of the open lock on the blade unit (as shown). 

Turn the blending jar clockwise now, till the arrow marking points exactly at the marking of the  closed lock.



## HOW TO REMOVE THE JAR

Remove the jar from the device by turning it anti-clockwise till the arrow markings point at the  marking of the open lock of the blade unit. Pull the jar downwards off the device.

THE JAR CAN ONLY BE FITTED OR REMOVED WHEN THE JAR IS IN DOWNWARD POSITION.



THE DEVICE WILL START AS SOON AS JAR IS PUSHED UPWARDS. DO NOT USE THE SAFETY BUTTON ON THE LEFT TO TURN IT ON.

## HOW TO STOP THE SMOOTHIE MAKER:




After approx. 10-20 seconds of use, press the SAFETY BUTTON on the left side of the device, push the jar downwards, and the Smoothie Maker will TURN OFF automatically.

PLEASE NOTE THAT THE SAFETY BUTTON IS ONLY FOR RELEASING THE JAR FROM ITS LOCKED UPWARD POSITION SO THAT THE DEVICE SHUTS OFF AUTOMATICALLY.

## HOW TO REMOVE AND CLEAN BLADE UNIT:



- Remove the jar when in downward position.
- Now, turn the motor unit upwards (Unit should be disconnected from the mains).
- Remove the blade unit by holding it on the bottom edge and turning to the left (attention: the blades are extremely sharp!).
- The lock markings on the blade and arrow marking on the housing,  show the correct position for unlocking the blade unit.
- Now you can clean the blade unit under running water (Attention: never clean the blade unit in the dishwasher)
- After drying, place the blade unit on the motor unit.

The arrow marking on the housing has to point at the marking of the open lock on the blade unit (as shown below). Now, turn it anti-clockwise to lock the blade in place.